

VNM SHIFTER

Quick Guide



Content



- | | |
|--------------------------|--------------------------|
| 1. Shifter with grid SEQ | 5. Nut M18 for knob |
| 2. Grid H7 | 6. USB cable |
| 3. Knob SEQ | 7. Hexagon alley key |
| 4. Knob H | 8. Update firmware cable |


Connection



The connection is placed on the low-behind of shifter.

The icon is:

- Plug in USB cable to connect to PC
- H shifter mode (select by switch to)
- Sequence mode
- Plug in truck knob
- Plug in to update firmware

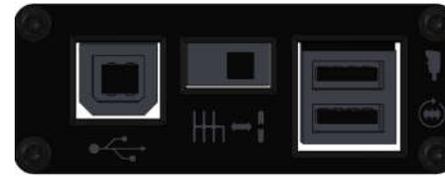

Adjust Spring

Adjust Y axis:
✓ Clockwise to increase force



Adjust SEQUENCE grid:
✓ Clockwise to increase force

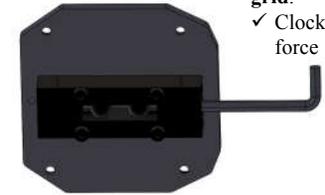


Table Clamp



Exchange face

