


## 1. Accessory List



- Countersunk Head Screw M4-6 x 6
- Countersunk Head Screw M4-10 x 4
- Pan Head Screw M4-6 x 6
- Pan Head Screw M4-10 x 4
- Circular Bracket x 1
- L-shaped Bracket x 1
- Cable Clip x 2
- Allen Key (2.5mm) x 1

## 2. Installation on P1000

2.1 Attach the Circular Bracket to the corresponding product and secure it with two M4-10 Countersunk Head Screws.

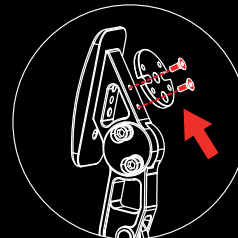



2.2 First, remove the pedal plate, then attach the P-HPR GT using four M4-6 Countersunk Head Screws.

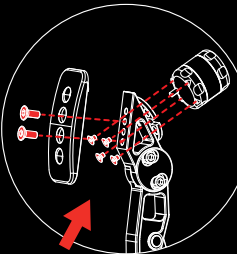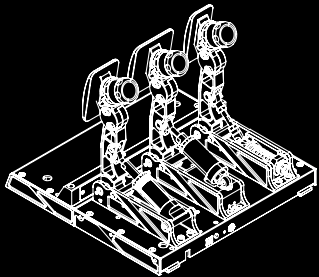

2.3 Reattach the pedal plate to complete the installation.

## 3. Installation on P500


3.1 Attach the L-shaped Bracket to the P500 pedal and secure it with two M4-10 Pan Head Screws.

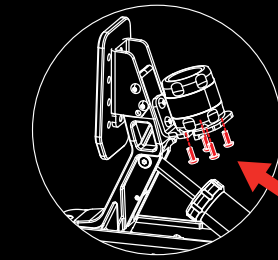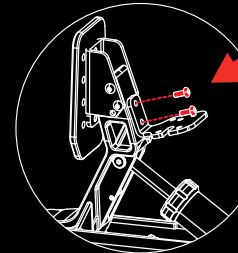


3.2 Attach the P-HPR GT using four M4-6 Pan Head Screws to complete the installation.

## 4. Installation on P2000-R

4.1 Attach the Circular Bracket to the adapter using two M4-10 Countersunk Head Screws.

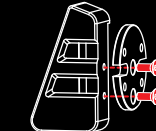

4.2 Attach the P-HPR GT onto the bracket using four M4-6 Countersunk Head Screws.


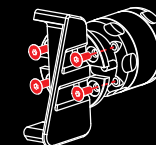


4.3 Secure with three M2.5-8 Countersunk Head Screws to complete the installation.



## 5. Installation on TB-RS

5.1 Attach the P-HPR GT to the Circular Bracket using four M4-6 Countersunk Head Screws.

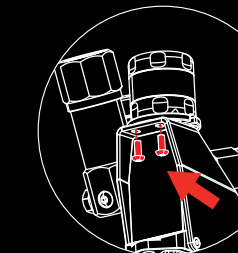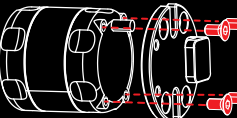

5.2 Install the P-HPR GT in the designated position on the TB-RS and secure with two M4-6 Pan Head Screws to complete the installation.

Note: SimPro Manager required to complete setup

Software & applications



Install SimPro Manager on PC to complete setup



Product Tutorial  
(Scan the QR code to view more)